



—
INSTALLATION INSTRUCTION


Handle and spare fuse storage clip OTVS_

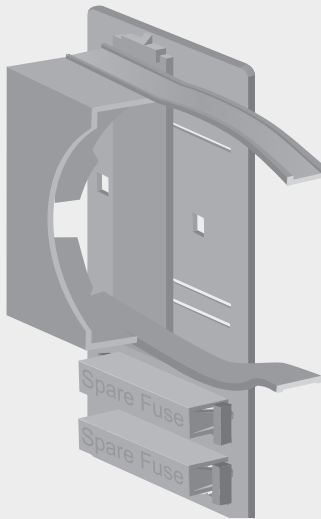


OTVS1, OTVS2

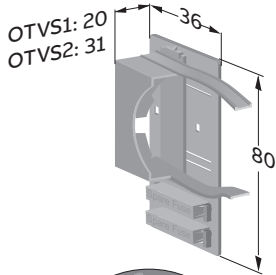

OTVS1	OTVS2
OTM160-250_	OTM315-800_
OSM32-250_	OTM1000-2500_C
	OSM315-1250_



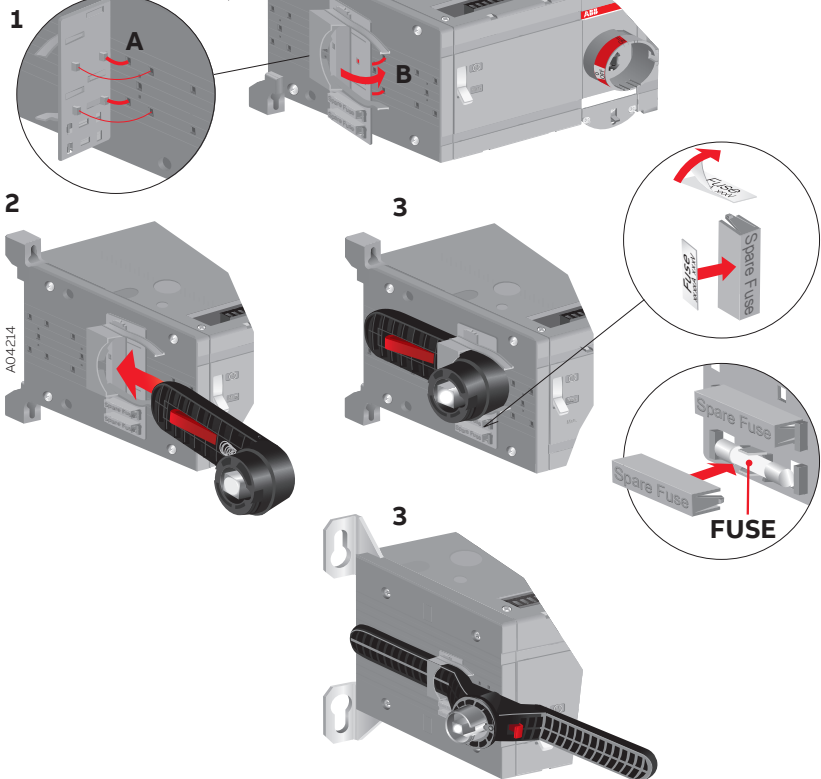


OTVS0


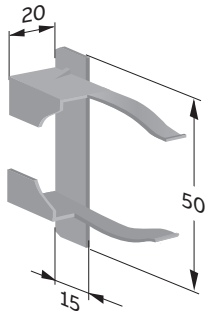


OTVS0

OTM30-160F_
OTM160-250_
OSM32-250_

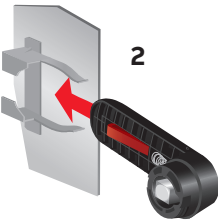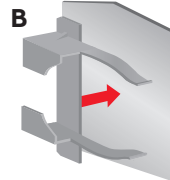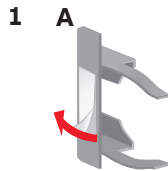

3

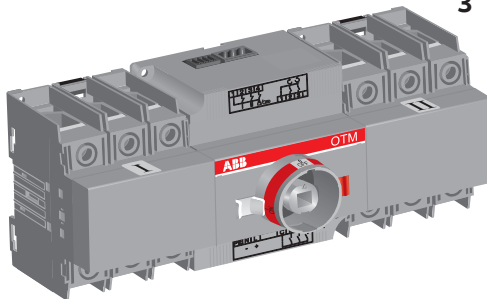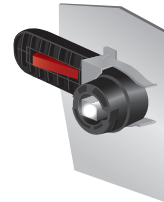



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage