

# Driver type ABB DTM700

## General information of FDI Interpreted DTM

### Contents

1	DTM700 - Device Type Manager .....	2
1.1	Device - Revision Record - What is new?.....	2
1.1.1	Hardware, Software, Firmware .....	2
1.2	Supported devices.....	2
1.3	DTM700 general version description .....	2
1.4	Requirements.....	2
1.4.1	PC-Hardware, Operating system.....	2
1.4.2	Frame application / compatibility .....	3
1.5	Installation and configuration .....	3
1.5.1	Installation.....	3
1.5.2	Uninstall instructions.....	3
1.6	Update- / Upgrade instructions.....	3
1.7	Known problems and limitations .....	3
1.8	Getting help / Additional information .....	3
1.9	How to get the latest information & software?.....	4
1.10	Licensing the DTM driver.....	4
	Contacts.....	5

\*) The individual device type driver Supplement Information & Software is available on the data medium or published on [www.abb.com/fieldbus](http://www.abb.com/fieldbus)

# 1 DTM700 - Device Type Manager

## 1.1 Device - Revision Record - What is new?

### 1.1.1 Hardware, Software, Firmware

See the respective device driver Supplement-Information\*)

## 1.2 Supported devices

Type "ABB DTM700" is the name of the FDI interpreted field device driver for HART, PROFIBUS and Foundation Fieldbus. The following supplementary information refers to all DTM700.

## 1.3 DTM700 general version description

Released Version	Released Date	Version of released, interpreted FDI-Package	Remarks
07.XX.YY <small>07 = fix, xx = device, yy = version</small>	January 2020	NN.MM.OO	First release

## 1.4 Requirements

### 1.4.1 PC-Hardware, Operating system

Minimum requirement

- Member of the "Administrators" group
- 2-GHz-Processor or better with 32 Bit (x86) or 64 Bit (x64)
- 1 GB RAM or better
- 500 MB free hard disk space
- 1024 x 768 screen resolution recommended
- Microsoft Windows 7 Service Pack 1, Windows 8.1 & Windows 10 (32 Bit / 64 Bit variants supported)
- Microsoft .NET Framework 4.6.1
- Microsoft Visual C++ 2015 Redistributables - 14.0.23026
- Microsoft Internet Explorer 11.0 or higher
- Adobe Reader latest version

## 1.4.2 Frame application / compatibility

The FDT compatibility testing can be checked on need basis dtmINSPECTOR.

Therefore, the type ABB DTM700 should be usable in all frame applications according to the requirements of FDT 1.2. / 1.2.1.

Refer the corresponding frame application documentation and manuals.

## 1.5 Installation and configuration

### 1.5.1 Installation

- Ensure that the minimum hardware requirements are met.
- Start Windows (login with administrator rights!).
- Cancel all active applications.
- Unpack the DTM zip file available as download from [www.abb.com/Instrumentation](http://www.abb.com/Instrumentation)
- Start the installation Wizard as follows:  
DTM zip file \Revxx.yy.zz\ABB DTM DeviceTypeName.exe with right hand MouseClick and "run as Administrator"
- Follow device specific instructions.

### 1.5.2 Uninstall instructions

- In the operating system: Start -> Settings -> Control Panel  
→ Add/Remove Programs -> Select the ABB DTM DeviceTypeName and Uninstall.

## 1.6 Update- / Upgrade instructions

- Uninstallation is not required before update / upgrade. It can be handled like a new installation existing projects will be retained.
- Hints regarding new versions may be found under [www.abb.com/Fieldbus](http://www.abb.com/Fieldbus)

## 1.7 Known problems and limitations

In addition to the specific hints in the respective device driver Supplement-Information\*) the general hints are attached.

## 1.8 Getting help / Additional information

- Help concerning the integration of the DTM in the FDT frame application can be found in the respective documentation of the frame application.

## 1.9 How to get the latest information & software?

- The latest DTM700 Supplement Information is available on [www.abb.com/fieldbus](http://www.abb.com/fieldbus)
- Enter in the search field following No. "3KXD801700R3901".
- For the single device driver see the respective Supplement Information & Software\*)

## 1.10 Licensing the DTM driver

- The type ABB DTM700 is usable without any license in any frame application.
- After installation the type ABB DTM700 runs 90-days in demo mode (full functionality) and needs to be purchased within this period, if the storage of data being requested.

## Contacts

—

**ABB Limited**  
**Measurement & Analytics**  
Howard Road, St. Neots  
Cambridgeshire, PE19 8EU  
UK  
Tel: +44 (0) 870 600 6122  
Fax: +44 (0)1480 213 339  
Email: [enquiries.mp.uk@gb.abb.com](mailto:enquiries.mp.uk@gb.abb.com)

**ABB Inc.**  
**Measurement & Analytics**  
125 E. County Line Road  
Warminster, PA 18974  
USA  
Tel: +1 215 674 6000  
Fax: +1 215 674 7183  
[www.abb.com/measurement](http://www.abb.com/measurement)

**ABB Automation Products GmbH**  
**Measurement & Analytics**  
Schillerstr. 72  
32425 Minden  
Germany  
Tel: +49 571 830-0  
Fax: +49 571 830-1806  
Email: [www.abb.com/contact](http://www.abb.com/contact)

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regarding to purchase orders, the agreed shall prevail.

ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

**Copyright© 2020 ABB**  
All rights reserved