

## Microsoft Windows Operating System Compatibility Chart

The following table provides a compatibility chart between the most recent version of our tools, and supported Microsoft Windows operating systems, running on single or multi-core platforms.

		Software Tools					
		Firmware Loader 2.33 and newer	ISaGRAF 2.32 and newer	RealFLO 6.75.1 and newer	SCADAlog 2.11 and newer	SCADASense 4000 Series Configurator 1.21 and newer	SCADAserver 1.32 and newer
Microsoft Windows Operating Systems	2000 Pro	√	√	√	√	√	√
	XP Pro	√	√	√ 32-bit only	√	√	√
	Server 2003	√	√	X	√	√	√
	Vista Business	√	X	√	√	√	X
	Vista Ultimate	√	X	√	√	√	X
	Vista Enterprise	√	X	√	√	√	X
	Windows 7 Pro	√	X	√	X	X	X
	Windows 7 Ultimate	√	X	√	X	X	X

**Key:** √ = supported, X = not supported

**Note:** Windows XP Home, Windows Vista Home, and Windows Vista Startup are not supported.

## Technical Note

		Software Tools					
		E-Series Configurator 1.29 -7.85	SCADAPack E Configurator 8.00 and newer	E-Series Difference Generator 1.3a – 7.85	SCADAPack E Difference Generator 8.00 and newer	E-Series Security Administrator 1.00 – 7.85	SCADAPack E Security Administrator 8.00 and newer
<b>Microsoft Windows Operating Systems</b>	2000 Pro	√	√	√	√	√	√
	XP Pro	√	√	√	√	√	√
	Server 2003	√	√	√	√	√	√
	Vista Business	X	X	√	X	X	X
	Vista Ultimate	X	√	√	√	X	√
	Vista Enterprise	X	√	√	√	X	√
	Windows 7 Pro	X	√	X	√	X	√
	Windows 7 Ultimate	X	√	X	√	X	√

**Key:** √ = supported, X = not supported

**Note:** Windows XP Home, Windows Vista Home, and Windows Vista Startup are not supported.

		Software Tools						Trio Tview+
		SCADAPack Workbench	Accutech Manager 2.0.0 and newer	SCADAPack Vision 2.07B and newer	FlowStation Configurator 1.22 and newer	Telepace 3.22 and newer	Telepace Studio 4.8.3 and newer 5.0.0 and newer	
<b>Microsoft Windows Operating Systems</b>	2000 Pro	X	√	√	√	√	√	√
	XP Pro	√	√	√	√ 32-bit only	√ 32-bit only	√ 32-bit only	√
	Server 2003	√	√	√	X	√ 32-bit only	X	X
	Vista Business	X	X	X	X	√ 32-bit only	X	X
	Vista Ultimate	√	√	X	√	√ 32-bit only	√	X
	Vista Enterprise	√	√	X	√	√ 32-bit only	√	X
	Windows 7 Pro	√	√	√	√	X	√	√ (32-bit)
	Windows 7 Ultimate	√	√	√	√	X	√	√ (32-bit)

**Key:** √ = supported, X = not supported

**Note:** Windows XP Home, Windows Vista Home, and Windows Vista Startup are not supported.

**NOTE:** ClearSCADA compatibility is found in a separate chart.