

ABB MEASUREMENT & ANALYTICS | DATA SHEET

EAN823 (Contrac)

Electronic unit



For the continuous control of Co	ontrac
actuators PME120-AN and LME6	520-AN.

actuators PME120-AN and LME620-AN.
Processor-controlled electronic unit according to the frequency convert principle
Power supply 115 V AC or 230 V AC
Conventional signal interface (0/4 to 20 mA / 24 V)
Digital communication via RS232 and HART
Additional functions such as process controller, maintenance computer, programmable characteristics
Simple configuration and parameter setting via graphical user interface
Torque and speed variation
PROFIBUS DP

Field mount housing in high IP rating IP 66

Brief description

The electronic unit builds the interface between the actuator and the control system.

During continuous positioning, the electronic unit varies the motor torque continuously until the actuator force and the control valve force are balanced. High response sensitivity and high positioning accuracy with short positioning time ensure an excellent control quality and a long actuator life.

Operating principles

The actuator continuously responds to a set point signal. The motor is permanently under voltage (operating mode S9 - 100 % stall-proof according to IEC 60034-1 / EN 60034-1) and gently increases or reduces the torque on the electronic unit in proportion to the ΔY signal (the difference between the Y set point and the Y position signal).

The actuator is not subject to temperature derating, i.e., there are no restrictions, even at the maximum permissible ambient temperature. Where a state of balance exists, the actuator force and process force are equivalent and the actuator keeps the final control element in the required position.

The classification of the 'S9 - 100 % overload protected' Contrac actuator in accordance with IEC 60034-1 / EN 60034-1 by far exceeds the requirements for the highest class, 'continuous modulation, class D' in accordance with EN 15714-2.

The Contrac actuator offers extensive process optimization capabilities thanks to its high-precision and highly dynamic operation.

Electronic unit

Electronic units are available for assembly in the field near the actuator, remotely in a mounting rack or for integrated assembly (smallest actuator type). In addition to the terminals, the electronic unit contains the microprocessor, frequency converter for motor control, analog and binary inputs and outputs, PROFIBUS® or HART® communication interfaces, the commissioning and service field and a plug connection to connect a PC.

No matter what the motor power of the respective actuator is, all electronic units are supplied single-phase by 230 V or 115 V mains supply (50 Hz or 60 Hz).

The commissioning and service field enables the end positions and direction of rotation to be set on the actuator. Moreover, status information is displayed using LEDs. Push buttons can be used to operate the actuator and set the operating mode (Automatic, Out of Service).

Analog signal and power input

For analog control, the set point entry is received from the control system through a 0 to 20 mA or 4 to 20 mA current value. Signal monitoring is possible. Should the signal leave the pre-defined limits, the actuator will perform the set safety procedure (e. g. 'Lock in last position' or 'Drive to safety position').

The position feedback is also given through a 0 to 20 mA or 4 to 20 mA feedback signal. There are 3 digital inputs and 3 digital outputs available in addition to the analog signal. If a digital input is activated, it will take priority over the set point signal (manual mode takes priority over automatic mode).

The following digital input configurations are possible:

Configuration	Digital input 1	Digital input 2	Digital input 3
OFF	No function	No function	No function
Manual	Manual mode /	Travel command in	Travel command
intervention	Automatic mode	OPEN direction	in CLOSE direction
	switching		
Rapid traverse	Rapid traverse	Rapid traverse	Rapid traverse
	mode / Automatic	travel command in	travel command in
	mode switching	OPEN direction	CLOSE direction
Step controller	ON / OFF step	Step controller	Step controller
	controller activation	npulses in OPEN	pulses in CLOSE
		direction	direction

... Brief description

... Analog signal and power input

The digital output function is freely selectable for each output. The following functions are available:

Function	Description	
Ready to operate	Signaling of device status.	
Signal end position 0 %	Actuator has reached the 0 % position.	
Signal end position 100 %	Actuator has reached the 100 % position.	
Signal limit value 1 rising	gWhile the signal level is rising, the actuator has	
	reached the position defined as limit value 1.	
Signal limit value 1	While the signal level is falling, the actuator has	
falling	reached the position defined as limit value 1.	
Signal limit value 2 risingWhile the signal level is rising, the actuator has		
	reached the position defined as limit value 2.	
Signal limit value 2	While the signal level is falling, the actuator has	
falling	reached the position defined as limit value 2.	
Collective failure	Drive function is no longer given. The actuator is	
	no longer available.	
Collective alarm	Parameters in the Contrac interface system have	
	adopted values, which make a failure in the near	
	future likely. The actuator remains functional.	
Local operation	The actuator is operated via the local control	
	station (ISF)	
Rapid traverse +	Actuator is moving at rapid traverse speed in +	
direction	direction (only for 2-motor version).	
Rapid traverse control	Actuator is moving at rapid traverse speed in -	
-direction	direction (only for 2-motor version).	

Step controller operation

In the 'step controller' operating mode the incoming control commands are received as pulses at digital inputs 2 and 3 these are upward-integrated into an internal memory. The memory uses these pulses to generate an 'artificial' internal set point which the actuator then follows. This process is as easy on the control valve and actuator operation as the analog control process.

Rapid traverse mode

The actuator is operated exactly in the same operating mode as in the analog control mode. On activation of digital inputs 2 or 3, the actuator moves at twice the rated operating speed and half the torque in the corresponding direction. Just before the end position is reached, the actuator travel speed is automatically switched back to the set speed, at which the remaining distance is covered.

Speed

Contrac actuators offer different speed adjustments for both directions, independently of actuator torque or actuator force. Furthermore, a speed characteristics curve can be set with three different speed values for each direction.

The actuator speed is steplessly adapted to the rate of change in speed of the set point value. This ensures a highly dynamic and extremely precise control process. In order to preserve the control valve, the actuator speed is automatically reduced before the end position is reached.

Torque/Force

The torque and actuator force setting options are comparable to the speed setting options. 50 %, 75 % and 100 % of the rated output value can be selected. The electronic unit alters the motor actuation according to the selected value.

Set point monitoring

The set point can be monitored for compliance with the adjustable limit values. Should the set point exceed the upper limit value or fall below the lower limit value, the actuator will perform the previously defined safety action. 'Lock in current Position' or 'Move to pre-defined safety position' are available as safety actions.

Ambient conditions

Temperature

Different temperature versions are available, dependent on the actuator type.

The power-up period is not subject to derating, i.e. even at the maximum permissible ambient temperature, the actuator ensures maximum control precision and dynamics during a power-up period of 100 %.

Corrosion protection

Contrac actuators and electronic units have been designed for operation in extreme ambient conditions. They satisfy the requirements of atmospheric corrosivity category C5-I (highly polluted industrial atmospheres) for protection against external corrosion in accordance with DIN EN 15714 (Electric actuators for industrial valves – Basic requirements), and EN ISO 12944-2:1998 (Paints and varnishes. Corrosion protection of steel structures by protective paint systems. Classification of environments).

Electronic cabinet modules satisfy the requirements of category C1 (low pollution) as per EN ISO 12944-2:1998 (Paints and varnishes. Corrosion protection of steel structures by protective paint systems. Classification of environments).

Maintenance interval

Contrac actuators and electronic units exceed the service life requirements for the highest class D, 'continuous modulation', as per DIN EN 15714 (Electric actuators for industrial valves – Basic requirements). The actuators remain maintenance-free for up to 10 years under 'normal' load.

Expected service life of the device

With proper use and consideration of relevant environmental conditions, the service life of the Contrac actuators and electronic units can reach approx. 10 years.

Regular maintenance work and / or proper repairs by ABB Service, along with the use of ABB spare parts, can extend the service life of the Contrac actuators and electronic units.

Communication

The PROFIBUS DP®, PROFIBUS DP®/V1 or HART® communication protocols are available for digital communication.

PROFIBUS®

PROFIBUS DP® is an international, open field bus protocol which has been standardized in the field bus standard EN 50170. On a cyclic basis, the master reads the input information from the slaves and writes the output information to the slaves. In addition to this cyclic data transfer of the process representation (e.g. setpoint and actual value), Profibus DP also provides powerful functions for diagnostics and commissioning. PROFIBUS DP/V1 additionally offers the acyclic transfer of data for the configuration of slaves, for example. Data traffic is monitored through the monitoring functions on the master and slave sides. In addition to PROFIBUS® data transfer, ABB Contrac actuators provide two configurable binary outputs to for example signal that the end position has been reached. The two configurable digital outputs can be used independently of the bus communication.

HART®

Contrac actuators also offer the option of using the HART® communication protocol for configuration and parameterization while operation is in progress. HART®-FSK communication enables simultaneous analog set point transmission and digital communication without additional installation. The HART signal is modulated on to the 4 to 20 mA analog set point signal. The HART® protocol works with Frequency Shift Keying (FSK) technology, based on the Bell 202 communication standard.

FDI - Field Device Integration

The Device Type Driver for Contrac actuators is based on FDI technology and can either be integrated in a control system or loaded onto a PC with the ABB Ability $^{\text{TM}}$ Field Information Manager (FIM).

This allows you to work with the same user interface in the commissioning phase, during operation, and for service tasks involving monitoring the device, parameterization, and reading out data.

DTM

The DTM (Device Type Manager) for Contrac actuators is based on FDT / DTM technology (FDT 1.2 / 1.2.1) and can either be integrated into a control system or loaded on a PC with an FDT framework application. This allows you to work with the same user interface in the commissioning phase, during operation, and for servicing tasks, involving monitoring the device, setting parameters, and reading out data. Communication is based on HART® protocol or PROFIBUS® communication. Reading out data from the device has no effect on the operation in progress. Newly set parameters are saved in the non-volatile memory directly upon download to the device, and become active immediately.

EDD

Similar to DTM, the EDD (Electronic Device Description) provides the option of configuration and parameterization of the device through HART® communication by using a handheld terminal or an EDD integrated in the system.

Specification

General information

EAN823		
IP rating	IP 66 in accordance with IEC 60529 / EN 60529	
	NEMA 4X in accordance with CAN / CSA22.2 No. 94	
Humidity	≤ 95% annual average; condensation not permitted	
Ambient temperature	−25 to 55 °C (−13 to 131 °F)	
Transport and storage temperature	-25 to 70 °C (-13 to 158 °F)	
Long-term storage temperature	-25 to 40 °C (-13 to 104 °F)	
Mounting position	On vertical mounting plate, lateral cable gland, left	
Vibration stress	Maximum 150 Hz: acceleration: 1 g (in accordance with EN 60068-2-6, Table C.2)	
Electrical connection	Mains supply and connection cable to the control system through screw terminals.	
	Connection cable between electronic unit and actuator tightly fastened optionally to the electronic	
	unit, from the actuator side using a connector to the connection to the actuator. Available cable	
	lengths 5 m (16 ft), 10 m (32 ft) or 20 m (65 ft).	
	Maximum cable length for delivery without cable: 30 m (98 ft)	
Weight	11 kg (24 lbs)	

Power supply

EAN823				
Supply voltage (standard actuators)	115 V AC (94 130	V) or 230 V AC (190 2	260 V); 47.5 63 Hz; s	single-phase
Current consumption at the electronic unit	Actuator	I _{max} at 115 V	I _{max} at 230 V	I _{pos} (115 V + 230 V):
(115 V AC / 230 V AC)	PME120-AN	1.0 / 1.4 A*	0.5 / 0.7 A*	approx. 40 to 50 % of I_{max}
	LME620-AN	1.0 / 1.4 A*	0.5 / 0.7 A*	
External fuse for electronic unit	16 A, time-lag			

^{*} For low-temperature version

Communication

Conventional communication	
Analog input	0 / 4 to 20 mA; internal load: 300 Ω
Analog output	0 / 4 to 20 mA, electrically isolated, max. load 500 Ω
3 digital inputs, 1 to 3	Digital 0: −3 to 5 V or open, electrically isolated
	Digital 1: 12 to 35 V, electrically isolated
3 digital outputs, 1 to 3	Potential-free relay contact, max. 60 V, 150 mA
Digital communication	RS232 for commissioning and service, with optional FSK / HART® or PROFIBUS DP®
Default settings	see Table Conventional communication on page 9.
Voltage output U _V	24 V, 15 mA, electrically isolated, for scanning external contacts, or similar applications
Connection for transmitter (optional)	Supply for two-wire transmitter with activated process controller in Contrac
Individual settings	See data sheet 'DS/CONTRAC/SETTING' or available upon request.

_

... Specification

... Communication

PNO ID no.	0×9655 Actuators with DP/V0 communication (cyclic data traffic)	
	0×09EC Actuators with DP/V1 communication (cyclic and acyclic data traffic)	
Communication protocol	PROFIBUS PA® Profile V3.0 Class B in accordance with IEC 50170 / EN 50170 (DIN 19245)	
Bus cable	Twisted, shielded copper wire acc. to IEC 50170 / EN 50170	
nterface	EIA-485 (RS485) acc. to IEC 50170 / EN 50170	
Permissible baud rates	93.75 Kbit/s	
	187.5 Kbit/s	
	500 Kbit/s	
	1500 Kbit/s	
	Automatic baud rate detection	
Bus address	0 to 126, default address 126	
	Set Slave Address service is supported	
Bus termination	Connectable active bus termination. Power supply from electronic unit	
Block types	1 analog input function block	
	1 transducer block	
	1 physical block	
Failsafe	Failsafe function is supported.	
	Configurable function for downtime of bus communication	
	Lock in last position	
	Drive to safety position	
	Adjust with last effective set point	
	Adjustable time delay	
Modules for cyclic communication	8 standards-compliant modules and 3 manufacturer-specific modules are available.*	
	SP (Short)	
	SP (Long)	
	RCAS_IN+RCAS_OUT	
	SP+READBACK+POS_D	
	SP+CHECKBACK	
	SP+READBACK+POS_D+CHECKBACK	
	RCAS_IN+RCAS_OUT+CHECKBACK	
	SP+RCAS_IN+READBACK+RCAS_OUT+POS_D+CHECKBACK	
	STANDARD	
	SP+RB+MESSEING	
	SP+RB+ENL_DIAG	
Acyclic communication	Full parameterization and configurability via Master Class 2 and DTM	
Default settings	see Table PROFIBUS DP® communication on page 9.	
Digital outputs 1 and 2	In addition to the PROFIBUS®-communication, there are 2 digital outputs.	
	Potential-free relay contact, max. 60 V, 150 mA	
	Default setting:	
	Digital output 1 End position signal 0 %	
	Digital output 2 End position signal 100 %	
Individual settings	See data sheet 'DS/CONTRAC/SETTING' or available upon request.	

 $^{^{\}star}$ A full description of communication modules can be found in parameterization and configuration instructions 45/68-10

Delivery status

The standard delivery scope includes metric cable entry threads with IP66 seal plugs. Optional NPT and PG adapters are available. The individual actuator configuration may vary from the standard setup above. This information can be displayed via the user interface. Unless otherwise specified by the user, the electronic units are delivered with the following standard configuration:

Conventional communication		
Parameter	Setting	
Function selection	Positioner, parameter: set point	
Set point function	Analog set point	
Set point range	4 to 20 mA	
Set point characteristic	Linear; set point = position value	
Actual value range	4 to 20 mA	
Nominal torque / rated force in ±direction	100 %	
Automatic speed in ±direction:	100 %	
Action in 0 % / 100 % end	Keep leak-tight with nominal torque /	
position	rated force	
Digital inputs	Digital input 1 Manual / Automatic	
	switching,	
	Digital input 2 / 3 Travel command \pm	
Digital outputs	Digital output 1 ready for operation /	
	error message,	
	Digital output 2 / 3 end position	
	signaling 0 % / 100 %	
Brake Away Function	Deactivated	
Shut-off function	Deactivated	
Positioning loop monitoring	Deactivated	
Set point monitoring	Deactivated	
Alarm Type	Deactivated	
Action after restoration of powe	erSwitch to Automatic	
Working range of actuator	Not set	

	5 ml
Parameter	Setting
Function selection	Positioner, parameter: set point
Set point function	Digital
Set point range	4 to 20 mA
Set point characteristic	Linear; set point = position value
Actual value range	Digital
Nominal torque / rated force in	100 %
±direction	
Automatic speed in ±direction:	100 %
Action in 0 % / 100 % end	Keep leak-tight with nominal torque /
position	rated force
Digital outputs	Digital output 1 / 2 end position signal 0
	% / 100 %
Brake Away Function	Deactivated
Shut-off function	Deactivated
Positioning loop monitoring	Deactivated
Communication monitoring	PROFIBUS DP® / V0:
	Activated
	Lock in last position
	PROFIBUS DP® / V1:
	Activated
	After delay time has elapsed (standard
	configuration 5 s)
	Lock in last position
Alarm Type	Deactivated
Action after restoration of	Switch to Automatic
power	
Working range of actuator	Not set

Electrical connections

Wire cross-sectional areas

EAN823 – Screw terminals	
Motor/brake	fixed: 1.5 to 6 mm ² (16 to 10 AWG)
	flexible: 1.5 to 4 mm ² (16 to 12 AWG)
Mains	fixed: 0.5 to 6 mm ² (20 to 10 AWG)
	flexible: 0.5 to 4 mm ² (20 to 12 AWG)
Signals	fixed: 0.5 to 6 mm ² (20 to 10 AWG)
	flexible: 0.5 to 4 mm ² (20 to 12 AWG)

Cable glands

The actuators and electronic units are supplied without cable glands. Suited cable glands must be installed on site.

Tap holes for cable glands			
metric		optional adapters for*	
Signals	M20 × 1.5 (2 ×)	PG 16 (2 ×)	NPT ½ in (2 ×)
Motor	M25 × 1.5 (1 ×)	PG 21 (1 ×)	NPT ¾ in (1 ×)

^{*} Adapter for PG or NPT thread must be ordered separately

Selection of suited connection cables

Please observe the following information when selecting cables:


- Use shielded cables for the motor/brake cable, the sensor cable, and the signal cable to the control system/controller.
- Connect the shielding of the motor/brake cable and the sensor cable on both sides (to the actuator and to the Contrac electronic unit).

Electronic unit EAN823 (Contrac)

Analog / Digital

Note

- · The electrical connection is provided by a universal plug on the actuator and the screw terminals on the electronic unit.
- If you are using a separate heat supply, the heater must be protected with a 2 to 6 A medium time-lag fuse (e.g. NEOZED D01 E14).

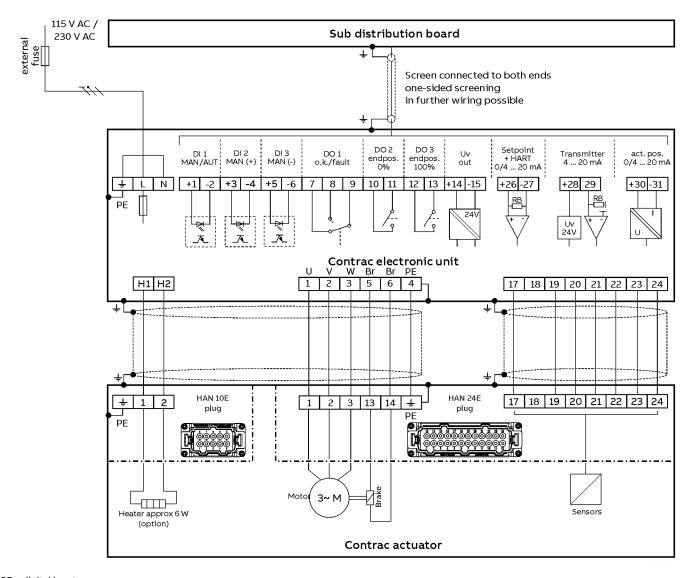

BE = digital input BA = digital output

Figure 1: Control via analog input 0/4 to 20 mA, HART $^{\circ}$ communication or binary inputs


... Electrical connections

... Electronic unit EAN823 (Contrac)

PROFIBUS DP®

Note


- · The electrical connection is provided by a universal plug on the actuator and the screw terminals on the electronic unit.
- If you are using a separate heat supply, the heater must be protected with a 2 to 6 A medium time-lag fuse (e.g. NEOZED D01 E14).

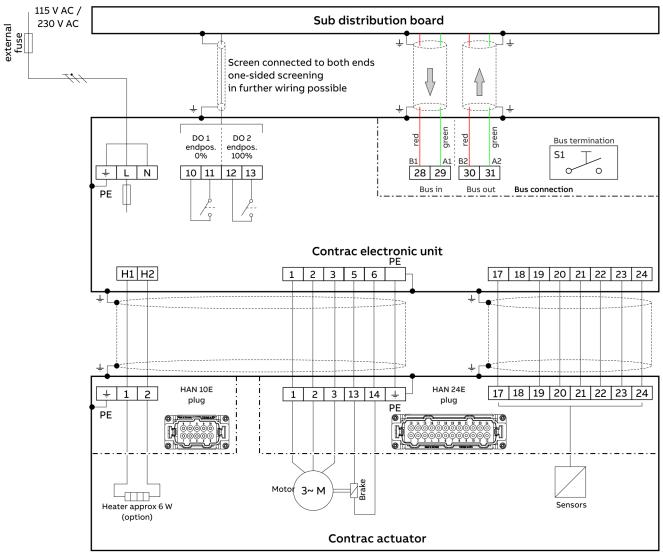

BA = digital output

Figure 2: Control via fieldbus PROFIBUS DP®

Dimensions

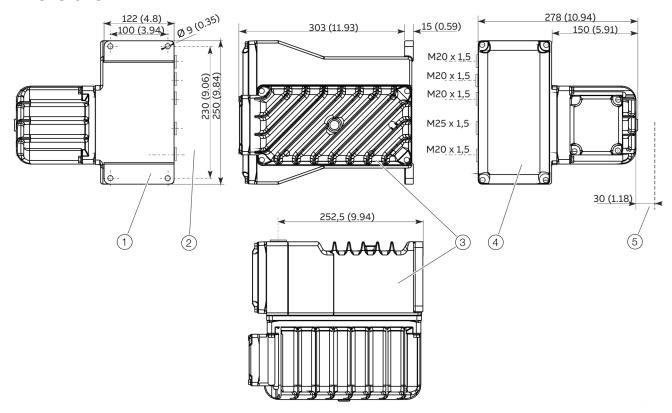

- 1 Back view
- (2) Leave at least 100 mm (3.94 in) distance for the cable gland and cable radius
- (3) Side view
- (4) Front view
- 5 Space for disassembly

Figure 3: Dimensions in mm (in)

Ordering Information

EAN823

Basic model	V68823	XXXX	XXX	XXX	XXX	XXX	XXX	XXX	X
EAN823 Electronic Unit, for field installation									
Suitable for									
Part-Turn Actuator PME120-AN		0001							
Linear Actuator LME620-AN		0002							
Adjusted to									
100 Nm // 80 ft-lbf // 4,5°/s // 20 s/90°			310						
4 kN // 900 lbf // 2,0 mm/s // 30 s/60 mm // 12.7 s/in			320						
Supply Voltage									
230 V AC 1 Ph				380					
115 V AC 1 Ph				381					
Frequency									
50 Hz					382				
60 Hz					383				
Digital Communication									
RS 232						384			
RS 232 + HART®						385			
PROFIBUS DP®						386			
PROFIBUS DPV1®						387			
Electrical Connection to Actuator									
Without cable (plug at actuator)							335		
With 5 m (16 ft) cable end and 24-pole plug							690		
With 10 m (32 ft) cable end and 24-pole plug							691		
With 20 m (65 ft) cable end and 24-pole plug							692		
Ambient Temperature Range of Actuator								-	
−10 to 65 °C (15 to 150 °F)								344	
−25 to 55 °C (−15 to 130 °F)								343	
-1 to 85 °C (30 to 185 °F) (Only for PME120-AN, max. 2°/s)								349	
Settings of Electronic Unit									-
Standard settings (see technical data)									3
Customer-specific settings (see data sheet 10/68-2.40 EN)									3

Additional ordering information EAN823

EAN823 Electronic Unit, for field installation	XXX	XXX	XXX	XXX	XXX	XXX	XXX	XXX	XXX	
Electrical Connection Thread										
Set NPT adapter (junction metric / NPT thread)	680									
Set PG adapter (junction metric / PG thread)	681									
Anti-condensation Heater in Actuator "ON"										
Anti-condensation heater in actuator "ON"		359								
Identification on Data Label										
(Alphanumeric, max. 32 characters)			295							
Data Label with US Units										
Data label with US units				253						
F. No. of associated Actuator on Data Label of Electronic Unit										
F. No. of associated actuator on data label of electronic unit (Available only	as "Special Re	equirer	ment")		297					
Factory Certificate 2.1 acc. to EN 10204										
Factory certificate 2.1 acc. EN 10204						291				
Certificate 3.1 acc. to EN 10204										
Certificate 3.1 acc. EN 10204							292			
UKCA										
UKCA								293	J	
Handling of Certificates										
Send via e-mail									GHP	
Send via mail									GHD	
Send via mail express									GHA	
Send with instrument									GHS	
Only archived									GHE	
Operating Instruction										
German										Z1D
English										Z1E
Portuguese										Z1P
Italian										Z1I
French										Z1F
Positioner / Controller Function										
Positioner function										
Process controller function										

Accessories

Description	Ordering number			
RHD(E) / RSD(E) / PME / LME Save & Restore Tool ECOM700 for Contrac electronic units with software version ≥ 2.0	3KXE911100L0001			
RHD(E) / RSD(E) / PME / LME Save & Restore Tool ECOM688 for Contrac electronic units with software version < 2.0	3201110			
RHD(E) / RSD(E) / PME / LME PC connection cable, 3 m cable with 9-pole Sub-D connector and 9-pole Sub-D female connector	746349			

Trademarks

HART is a registered trademark of FieldComm Group, Austin, Texas, USA PROFIBUS and PROFIBUS DP are registered trademarks of PROFIBUS & PROFINET International (PI)





Notes

Notes



ABB Measurement & Analytics

For your local ABB contact, visit:

www.abb.com/contacts

For more product information, visit:

www.abb.com/actuators

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail.

ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.